



## PLAQUE INSTALLATION METHODS

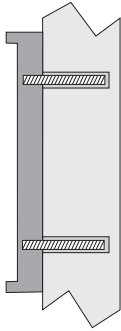


### Flush Mounting Type A

Studs are set in adhesive cement. There is no space between the letter and the surface

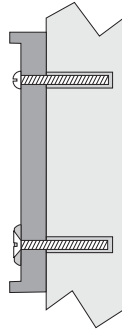


### Solid Wall Mount Type B

Round head or flat head screws are set into plastic or metal anchors optional rosettes

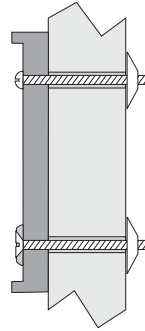

### Hollow Wall Mounting Type C


Round head or flat head screws for toggle adaption optional rosettes

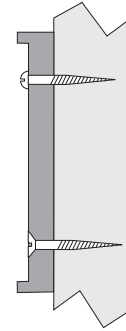

### Wood Mounting Type D


Round head or flat head wood screws optional rosettes

## LETTER INSTALLATION METHODS

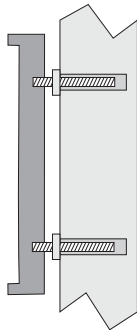


### Projected Jam Nut Mounting

Studs are set in adhesive cement. Stainless steel jamb nuts are inserted between the letter and the mounting surface

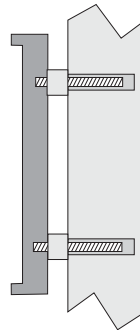

### Projected Spacer Mounting

Studs are set in adhesive cement. Pre-cut spacers are inserted between the letter and the mounting surface

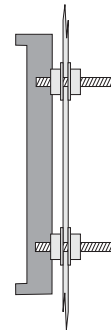

### Metal Wall Mounting

Where you have access to the rear of the wall, nuts and washers are used on both sides of the wall.

TIME WORKS UNLIMITED, INC.  
PO BOX 9052  
COLLEGE STATION, TEXAS 77842  
979.690.1368 Phone 979.690.0807 Fax  
**800-942-9273**  
timeworks3@gmail.com  
Artwork to: timeworksart@gmail.com